



SOFTPLAY TAKEAWAY

BOUNCY CASTLE RULES OF PLAY

- 1) Shoes must be removed before using the bouncy castle but wear socks at all times.
- 2) Maximum of 4 children on the bouncy castle at any one time, depending on age/weight (Do not exceed 90kg).
- 3) Strictly for use for children aged 2-8yrs only.
- 4) The bouncy castle must remain plugged into a power socket when in use.
- 5) Please switch off the bouncy castle when not in use.
- 6) Do not let children near to or allow them to touch the bouncy castle power fan.
- 7) No food or drink on the bouncy castle.
- 8) Children who are unwell should not use the play equipment.
- 9) Children who wear glasses should take particular care.
- 10) The door to the bouncy castle should be closed at all times.